



# Cyclo<sup>TM</sup> Discover User Manual

# Welcome

Thank you for purchasing this Mio. Please read this manual carefully before using your Mio for the first time. Keep this manual in a safe place and use as your first point of reference.

## Important information for using the manual

It is important to understand the terms and typographical conventions used in this manual.

**Bold** — Components or items displayed on screen, including buttons, headings, field names and options.

## Disclaimer

Not all models are available in all regions.

Depending on the specific model purchased, the colour and look of your device and accessories may not exactly match the graphics shown in this document.

Mio operates a policy of ongoing development. Mio reserves the right to make changes and improvements to any of the products described in this document without prior notice. Mio does not warrant that this document is error-free. The screenshots and other presentations shown in this manual may differ from the actual screens and presentations generated by the actual product. All such differences are minor and the actual product will deliver the described functionality as presented in this User Manual in all material respects.

## Copyright

© 2020 MiTAC Digital Technology Corporation. Mio is either a registered trademark or trademark of MiTAC Digital Technology Corporation ("MiTAC"). and is used under licence by Mio Technology Limited. All rights reserved.

All other trademarks and registrations are the property of their respective owners.

Revision: R00  
(05/2020)

# Contents

|  |    |
|--|----|
| Welcome  | 2  |
| Important information for using the manual ..... | 2  |
| Disclaimer .....                                 | 2  |
| Copyright.....                                   | 2  |
| Contents   | 3  |
| Knowing your device                              | 5  |
| Main unit .....                                  | 5  |
| Accessories.....                                 | 5  |
| Getting started                                  | 6  |
| Charging the battery .....                       | 6  |
| Performing the initial start-up .....            | 6  |
| Connecting your device to the computer .....     | 6  |
| Registering your Cyclo device with MioShare..... | 7  |
| Installing the device                            | 7  |
| Mounting the device on your bike .....           | 7  |
| Operating basics                                 | 8  |
| Using the POWER button .....                     | 8  |
| Using the touch screen .....                     | 8  |
| Unlocking the screen .....                       | 8  |
| Main menu  | 9  |
| System icons.....                                | 9  |
| Keyboard screen.....                             | 10 |
| Managing data on the device                      | 10 |
| MioShare.....                                    | 10 |

|  |    |
|--|----|
| CycloAgent.....  | 10 |
| Planning your tour   | 11 |
| Starting the tour .....                                    | 11 |
| NeverMiss™: Notifications of POI (Point of Interest) ..... | 11 |
| Viewing Map screens  | 12 |
| Viewing the dashboard screens.....                         | 13 |
| Starting navigation  | 14 |
| Using the Navigate wizard .....                            | 14 |
| Navigating to Home .....                                   | 15 |
| Other navigating options .....                             | 16 |
| Surprise Me  | 17 |
| Loop .....   | 17 |
| A to B (Address, POI or Point on map) .....                | 17 |
| Viewing the History  | 18 |
| Viewing the summary of recorded data .....                 | 18 |
| Customising your device                                    | 19 |
| Profiles.....  | 19 |
| Routing.....   | 19 |
| Dashboard .....  | 20 |
| Where Am I .....   | 20 |
| Manage .....   | 20 |
| Maps .....   | 20 |
| System.....  | 20 |
| For more information                                       | 22 |
| Online support.....  | 22 |
| Caring for your Mio .....                                  | 22 |
| Resetting the device .....                                 | 22 |

|                                  |    |
|----------------------------------|----|
| Troubleshooting .....            | 22 |
| What is GPS? .....               | 23 |
| IPX5 .....                       | 24 |
| Safety precautions .....         | 24 |
| Regulatory information.....      | 24 |
| WEEE .....                       | 25 |
| End user license agreement ..... | 25 |

# Knowing your device

## Main unit




- ❶ Status indicator**
  - Glows in amber: battery charging.
  - Glows in green: battery full.
  - Flashes in green: when the backlight is turned off.
- ❷ POWER button**

Turns your device on and off.
- ❸ Touch screen**
  - Displays the output of your device.
  - Tap the screen with your finger to select menu commands or enter information.



- ❹ Bike mount socket**

For the device mount.
  - ❺ Memory card slot**
  - ❻ Micro-USB connector**

Connects the USB cable.
-  The memory card slot is reserved for debugging purposes only.

## Accessories

Your device comes with the following accessories. To use your device on a bike, ensure you use the specific bike mount kit that came with your device. Mio may provide optional accessories for specific models. Please visit Mio website ([www.mio.com](http://www.mio.com)) for information.

 
- USB cable
- Bike mount kit

# Getting started

## Charging the battery

Your device has an internal battery that may not be fully charged when you purchase it. You should charge the battery for at least 8 hours before you start using it for the very first time.

To charge the battery, use the supplied USB cable to connect the device to a computer, USB charger or power adapter (not supplied).

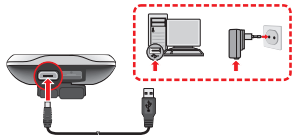

⚠ Caution! For optimal performance of the lithium battery, note the following:

- Do not charge the battery where the temperature is high (e.g. in direct sunlight).
- Failure to follow the battery usage instructions could cause damage to your device, battery and even bodily injury or property damage and will void the warranty.
- When storing the product for a long period of time, charge the battery to 50% – 80% capacity to prevent excess discharge.

## Performing the initial start-up

1. Mount the device and accessories on to your bike. For more information, see the “Installing the device” section.
2. Press and hold the **POWER** button for **3 seconds** to turn your device on.



3. Follow the prompts to personalise your device, including:
  - Select your preferred language.
  - Set the date and time.
  - Set the units format.
  - Create your user profile.

👉 You can change these settings while using the device by tapping **Main menu > Settings**.

4. **Activate the map.**

Enter the **Startup Key** (which is printed on the bottom of the box) and then tap **OK** to unlock your device. You will only have to do this the first time you use the device.

5. Once your device is turned on, it will search for satellite signals automatically. This may take several seconds depending on the location.

When GPS is fixed, the GPS signal icon (  ) on the screen indicates the GPS status.

## Connecting your device to the computer

1. Turn on the computer.
2. Turn on your device.
3. Connect the Micro-USB end of the USB cable to the back of your device and the other end to a USB port on your computer.
4. Select the desired connection type from the pop-up message window:
  - **Connect to PC:** Your device will be recognised as two external mass-storage drives: `Mio_system` and `Mio_data`. You can use Windows File Explorer to copy/move the files from the computer to your device. A USB

Connection screen appears to prevent you from using your device.

**DO NOT delete any files that are pre-installed on the device. Deleting the files can cause the device to crash. Mio is not responsible for product quality caused by file deletion.**

- **Charge only:** You will be able to continue using your device with the battery in charging mode via the computer.

## Registering your Cyclo device with MioShare

1. Go to MioShare to download and install CycloAgent to your computer.
  2. Connect your Cyclo device to the computer and select **Connect to PC**.
  3. Open CycloAgent and click **My Device > Register** to start synchronising data with the MioShare website.
- 📖 For the detailed information on using CycloAgent, refer to the CycloAgent documentation.

 
## Installing the device

### Mounting the device on your bike

The bike mount kit includes two types of rubber pads, allowing you to attach the bike mount to your bike securely.




1. Select the rubber pad that best fits the handle bars on your bike and then attach it using the two plastic straps.



2. Align the latch on the back of the device with the slot on the bike mount, and then rotate the device clockwise to lock the device to the bike mount.

 You can choose to mount the device on the handlebar or on the stem. See the following figure for the examples of mounting the device.

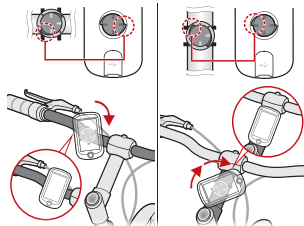

- 📖 To remove the device from the bike mount, rotate it counterclockwise.

# Operating basics

## Using the POWER button

- **Turning on the device**

Press and hold the POWER button for 3 seconds to turn on your device.

- **Turning off the backlight**

You can set the device to turn off the backlight automatically to reduce the battery consumption: **Main menu > Settings > System > Screen > Backlight Timer**.

Resume using the device to turn on the backlight.

- **Turning off the device**

Press and hold the POWER button for 3 seconds to pop up the Power Off/Cancel screen. Choose **Power Off** to turn off the device or **Cancel** to continue operating the device.

 Press and hold the POWER button for 5 seconds to power off the device if it is not responding.



Your device will automatically turn off after 10 minutes (by default) of inactivity. The Power Off/Cancel screen will pop up and the device will be turned off if you do not make a selection.

 You can change the auto power off setting by tapping **Main menu > Settings > System > Screen > Auto Power Off Timer**.

- **Navigating through the screens**

While the device is turned on and you are navigating through the menu screens, press the POWER button briefly to return to the previous screen.

## Using the touch screen

To operate your device, touch the screen with your finger. You can perform the following actions:

- **Tap**

Quick touch the screen once to open menus or select on-screen button/option.

- **Drag**

While navigating on the map, tap and hold on the screen without releasing your finger to move the map to the desired position.

## Unlocking the screen

Your device will automatically lock the screen after 30 seconds (by default) of inactivity. When the screen is locked, press the POWER button briefly to unlock the screen.

 You can change the screen lock setting by tapping **Main menu > Settings > System > Screen > Screen Lock Timer**.



# Main menu

The Main menu is your starting place for various tasks, providing quick access to applications and settings. Tap a button to start a task or open another menu.









- 1 The Tours includes the recorded routes from the websites, giving the best experience for cycling.
- 2 The Map displays the view of functions, including the map and navigation screens.
- 3 Start to plan your route by selecting the locations, such as home, address, tours, POI, etc.
- 4 Based on distance or time, the device will plan 3 routes for you to choose from.
- 5 Your trip can be saved in the history records. When your ride is finished, you can check the history data such as date/time, distance, speed, altitude, etc.
- 6 There are various customisation options available to enhance your riding experience. You can customise the system settings, user profiles and more.

## System icons

Various System icons in the title bar at the top of the screen provide the status information of your device. Depending on your settings, the icons may be different to provide various information of your device. Please note that these icons will not be always displayed during your trip.

 


- 1 Time display  
Displays the current time. The device will automatically set the correct time based on the current GPS fixes.
- 2 User profile  
 : City bike mode  
 : Mountain bike mode  
 : Race bike mode  
 : Run & walk mode
- 3 Recording status  
 : The device is recording your trip.  
 : Recording has been paused.
- 4 GPS signal  
The GPS signal icon indicates the GPS status. A bar shows the strength of the GPS signal being received; the more bars the stronger the signal.
- 5 Battery status  
The Battery icon indicates the remaining battery power.

## Keyboard screen

The Keyboard screen will display when you are required to enter text, such as when searching for a street name. Search results will be listed in matching order, with the closest matches appearing on the screen. The Keyboard screen can display with various layouts depending on the information you need to enter.

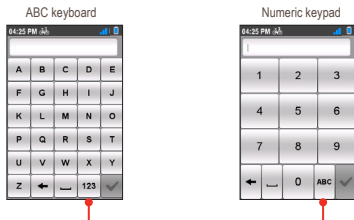

Example: entering the street name while searching for an address



Tap to switch between the ABC keyboard and Numeric keypad.

- Tap the keys to enter letters or numbers.

The keyboard features the “Predictive text” technology that allows addresses to be searched easily and quickly. As you enter a letter of an address, your device will compare all possible combinations against the maps.

- Tap  to delete the character.
- When done, tap .

- The device supports Russian, Bulgarian, and Greek keyboard for local users. You can enable (or disable) the desired keyboard from **Main menu** > **Settings** > **System** > **Keyboard**.

## Managing data on the device

### MioShare

By using MioShare, you can easily create or search a tour for your Cyclo device to navigate. It stores your cycling data for you to view online or synchronise with other third-party services.

For more information, visit: <http://mioshare.com/>

### CycloAgent

CycloAgent™ is a tool for synchronising data between your Cyclo™ device and the MioShare™ website, and for managing and updating your Cyclo device via your computer.

Visit the MioShare website (<http://www.mioshare.com/help>) to download CycloAgent.



- Make sure that you have an active Internet connection for this feature. Please make sure of the stable Internet connection and bandwidth for the possible large file of the map update.
- For the detailed information on using CycloAgent, refer to the CycloAgent documentation.

# Planning your tour

 
 
The Tours provides the recorded routes that give the best experience for cycling provided by other users and official institutes.

✎ If there is no route downloaded, you can download routes from MioShare™ (<http://mioshare.com>) and/or the third-party services.

## Starting the tour

1. Do one of the following to start the Tours:
  - Tap **Main menu** >  ; or
  - Tap **Main menu** >  > **Tours**.
2. Choose the desired route from the downloaded routes list.


✎ Tap the **Sort by** button at the bottom of the screen to change the sorting order of the entries:

 /  : by name;

 : distance from the current location;

 : by distance.

 3. Tap  /  to display more information of the route.
4. Tap **GO** to preview the information of the route.

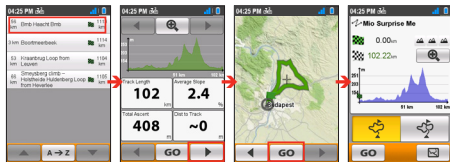

You can do one of the following:






- Judge the difficulty level of the route by the  icon:

   : easy

   : moderate



   : difficult

   : very difficult

- Tap  /  to zoom in/out the elevation plot. Tap the Left/Right button to scroll through the plot when it is zoomed in.
  - Select the **Nearby** mode (  ) to navigate to the nearest point of your route, or **Back-to-Start** mode (  ) to navigate to the starting point of your route.
  - Tap  to display the route to the destination.
5. Tap **GO** to start navigating.

## NeverMiss™: Notifications of POI (Point of Interest)

The NeverMiss™ function allows you to enjoy your cycling without missing any POI (Point of Interest) during the trip.

You can select **Main menu** > **Settings** > **System** > **Alerts** > **Spots remind** to enable (  ) or disable (  ) the NeverMiss™ function. When the function is enabled:

- When you download the route with POIs, you will get notifications as you approach the defined points.
- If the POI contains a link providing more information, scan the pop-up QR code by using your smartphone and get the details of the POI.

✎ This feature requires an Internet connection.



## Viewing Map screens



The screenshots and other presentations shown in the following sections may differ from the actual screens and presentations generated by the actual product.

 
The Map displays the map screen to navigate your trip.



To access the Map, tap **Main menu** > .


### Display or hide the notifications of POI

You can set your Cyclo device to display or hide the notifications of POI during the trip.

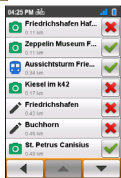



 1. Start the Tours and choose the desired route from the downloaded routes list.
2. Tap  /  to display the POI list screen.

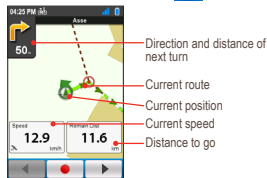

- Tap the POI to preview the information of the defined point.
- Tap the button next to the POI to display (  ) or hide (  ) the notifications.



Navigation screen

- From the map screen, you will be directed to your destination by visual instructions.
- When the navigation is in progress, you can record the data by tapping . When you are recording the route, the recorded track will be displayed as red on the map.
- During recording, you can stop/pause it by tapping  and then selecting the **Stop/Pause** option when prompted; otherwise, select **Cancel** to continue recording.
- The Dashboard function is made of screens placed next to each other. Tap  /  to change between the Dashboard screens.


Tap on the Navigation screen briefly to display the onscreen buttons.



- Tap / to zoom in/out the map.
- You can navigate the map anywhere by dragging and then moving the map. While navigating the map, tap to display your current position on the centre of the map.
- Tap to stop navigation.
- Tap to avoid a certain distance of route ahead.
- Tap to save the current location as a new place and upload it to **Place Manager** of the MioShare website.

## Viewing the dashboard screens

 The Map also provides the extended dashboard screens that can be used to assist you in your travels. The layout of the dashboard screens can be customised to display the information (e.g. speed, distance, time, calories, etc.) you want to know.



Navigation screen



Elevation screen




POI list

To learn how to customise the dashboard screens, see "Dashboard" in the "Customising your device" section.


# Starting navigation

  
## Using the Navigate wizard

Your device is equipped with maps that provide street-level detail for navigation, including POIs (Point of Interest) such as bike stores, restaurants, points of emergency, and more. The Navigate wizard allows you to search the location easily.

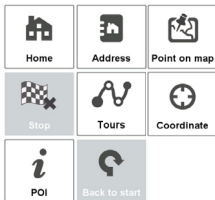









By using the Navigate wizard, there are several ways to select your destination. For example, you can tap the **Address** button to find the location by searching for an address.

1. To access the Navigate wizard, tap **Main menu** > .
2. Select the desired navigation function.
3. When searching is complete, the Searching Result screen displays the information of the route (e.g. the total distance, elevation plot, and more).
4. From the Searching Result screen, you can do one of the following:




Searching Result screen

- Judge the difficulty level of the route by the  icon:
  -  : easy
  -  : moderate
  -  : difficult
  -  : very difficult
- Tap  /  to zoom in/out the elevation plot. Tap the Left/Right button to scroll through the plot when it is zoomed in.
- Tap  to display the route to the destination.
- Tap **GO** to start navigating.

## Navigating to Home

 
### Setting up your Home location

If you have not set an address as Home, the first time you try to navigate to Home you will be prompted to search for an address using the Home setup wizard.

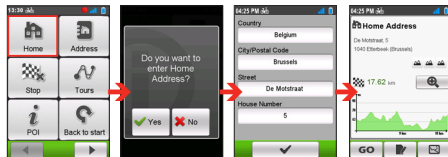

Once your home location has been set on the device, simply tap **GO** on the screen and you will be directed to Home quickly.

### Editing the Home location

1. On the Home Address screen, tap  .
2. You can change the home location by searching for an address.

### Searching for a POI

 
POI (Point of Interest) is a named site, feature, landmark or public venue which can be displayed as an icon on the map. POIs are grouped by category, such as bike stores, restaurants, shopping centres, and more.

The POI(s) that you have searched previously will be displayed when you tap from the Navigate screen. Simply tap the searched POI or tap New to find the other POIs.



1. Tap the **Nearby** button and then select **Nearby** or **City**:
  - **Nearby**: Search for the POIs around your current position.
  - **City**: Search for the POIs in the selected city.
2. Find a POI by:
  - keyword
  - category
  - emergency/bike store/food and drink

### Finding the location by Address

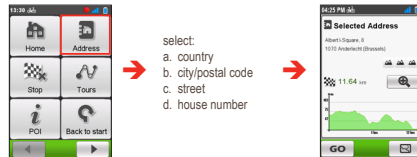


### Tours

For the detailed information on using the Tours function, refer to the “Planning your tour” section.


## Searching for a location from the map screen

 You can set the destination simply by pointing to it on the map screen.

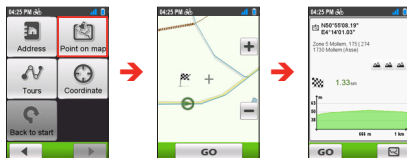

## Searching for a location using GPS coordinates

 You can manually enter the coordinates of your target destination. Tap **Coordinate** on the Navigate screen. Tap the **Latitude** and **Longitude** fields to enter the coordinates of the location.

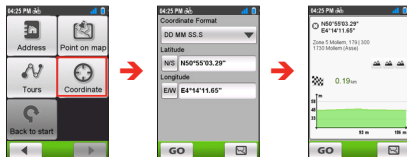

Tap the **Coordinate Format** option to change the input method for the latitude/longitude coordinate.

Tap **N/S** to change between North and South; tap **E/W** to change between East and West.

## Other navigating options

### Going back to start

 
The **Back to start** function enables the device to navigate you back to the starting point after you have reached the destination or completed your ride.

This feature is only available when the recording is in progress.



### Stopping navigation


To stop navigation for your ride, tap  on the Navigate screen.







# Surprise Me

The device features the Surprise Me™ function that will offer you up to three exciting routes around your location. If you've already taken a route from the same location, the device will try to propose you different routes, based on the possible and available roads around your current location. This way you will always be offered different routes to choose.

Tap  from the Main menu screen and then you can plan the routes randomly by selecting the following five functions: **Loop**, **Address**, **POI** and **Point on map**.



You can:

- Generate the route by **Distance** mode (  ) or **Time** mode (  ).
- Assign the desired amount of distance/time to ride in the **Distance/Time** field.

While generating the routes using **Time** mode, you can set the estimated average speed of your trip in the **Average Speed** field. The device will calculate the estimated distance of it.

 
- On the Searching Result screen, select one route (by colour buttons) and then tap **GO** to start navigating.

To view the general information of the generated routes, tap



## Loop

The device will generate the routes from your current location and the start/end point will be the same as your current location.

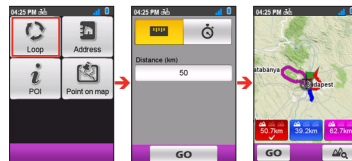


## A to B (Address, POI or Point on map)

The device will generate the routes from your current location to the following destination type: **Address**, **POI** or **Point on map**.


Choose one of the above functions and then complete the searching through the Navigate wizard.
  
## Address

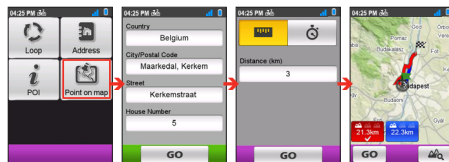



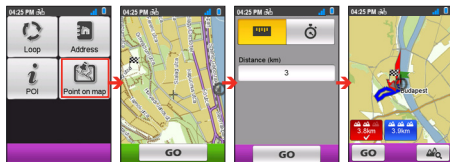


### Point on map



## Viewing the History

Your device will automatically save the history as the timer starts.

Information in History includes date, time, distance, average speed, altitude, and more.

1. To view the history data, tap  from the Main menu screen and then select an entry from the list.
2. Tap  /  to view details of the trip.
3. Tap **GO** to start navigating.







### Viewing the summary of recorded data

On the History screen, tap the **Summary** button to view statistics about the recorded data over a defined period of time based on the user profile.

- Change the filter option by tapping **All Recordings** or **Odometer**.
- When the **Odometer** is selected, it displays all the trip data existing on the device even if the recording is not used.
- Tap the following button to decide what data to summarise: **Totals, Year, Month, Week or Day**.

# Customising your device


There are various customisation options available to enhance your navigation and cycling experience. With the Settings menu, you will be able to customise your device such as the system settings, user profiles, map settings, and more.

- To access the Settings menu, tap  from the Main menu screen.
- Tap  /  to scroll through the Settings menu screens.
- While changing the settings, the check mark (  ) next to the option button indicates the setting status.

Example:

 : on/enabled

 
 : off/disabled

- When the settings have been changed, tap  at the bottom of the screen to complete and return to the previous screen.

## Profiles

The Profile entry screen displays the existing profile(s).



- You can set up to 6 profiles on the device.
- Tap **Create new profile** and enter the personal data (including Name, Birth date, Weight, Gender, and profile Type) to create a new profile entry.



You can select the profile Type as **City bike**, **Mountain bike**, **Race bike** or **Run & Walk**. The system will create different routes depending on the profile type. For example, Mountain

bike will use unpaved routes which will be avoided by using Race bike.

 Select the **E-Bike** option if you use an electric bicycle.

- Select an existing profile entry and then do one of the following:
  - Tap  to edit the name of the entry.
  - Tap  to delete the entry.

## Routing

This setting allows you to set the routing preference by selecting **Prefer**, **Allow** or **Try to avoid** in each route option.

The available options may be different depending on the selected routing type:



| Routing type \ Options | City bike | Mountain bike | Race bike | Run & Walk |
|------------------------|-----------|---------------|-----------|------------|
| Major roads            | V         | V             | V         | V          |
| Cycle routes           | V         | V             | V         |            |
| Node network           | V         | V             | V         |            |
| Unpaved roads          | V         | V             |           | V          |
| Cobblestone            | V         | V             | V         | V          |
| Ferries                | V         | V             | V         | V          |
| Walking routes         |           |               |           | V          |

## Dashboard

In the Dashboard Layout Change screen, you can change the layout of the following screens:


- Information screen 1, 2, 3 & 4
- Elevation screen
- Navigation
- Map screen
- History screen

To change the screen layout:

1. Tap the corresponding button in the Dashboard Layout Change screen.
2. Tap the number displayed at the bottom of the screen indicates the data fields (e.g. speed, distance, time, calories, etc.) included in the target screen.
3. Tap the numeric button and then select from the available number of data fields to display.
4. You can also change what data fields are displayed by tapping on each individual data field and then select the desired option on the list.



## Where Am I



The Where AM I screen displays your current GPS position with the coordinates info in map view. When tapping , you can see the number of satellites, your current position, and the strength of the signals.

 


## Manage

This setting allows you to manage the recorded data on the device, including: **History**, **Tours**, **Addresses** and **POI**.

To manage the data:

1. Tap the corresponding button in the Manage screen.
2. Select the desired entry and then do one of the following:
  - Tap  to edit the name of the entry.
  - Tap  to delete the entry.



## Maps



- **Auto Zoom:** Enable or disable automatic zooming during navigation. If selected, the Map screen will automatically zoom in or out, depending on your speed, to allow optimal viewing of your route.
- **Show Cities:** Display or hide the current city name on the navigation screen.
- **Orientation:** Enable or disable displaying North at the top of the map screen.
- **Map scheme:** Select the preferred map display style.




## System

### Screen

- **Brightness:** Drag the slider to the left to decrease the screen brightness or to the right to increase the screen brightness.

 You can also decrease/increase the screen brightness by tapping .

 To increase your battery life during a ride, make sure the screen brightness is turned down to reduce the battery consumption.

- **Backlight Timer:** Tap the option to select how long (from **15 seconds** to **Never**) the display screen remains lit after you press the POWER button.
- **Screen Lock Timer:** Tap the option to select how long of inactivity (from **5 seconds** to **Never**) will lock the device screen.
- **Auto Power Off Timer:** Tap the option to select how long of inactivity (from **10 minutes** to **Never**) will turn off the device automatically.

### Alerts

- **On tap screen:** Enable or disable the feedback sound while tapping on the screen.
- **Instructions:** Enable or disable the sound while getting instructions.
- **Auto Recording:** When disabled, a message will display asking if you want to start recording when movement is detected.
- **Spots remind:** Enable or disable the notifications of POI during the trip.

### Date & Time

The device will display the date and time based on the current GPS location. The Date & Time screen lets you set the date/time format.

- **Set Date format:** Tap the button to select the displayed date format: **Day/Month/Year**, **Month/Day/Year** or **Year/Month/Day**.

- **Set Time format:** You can set the displayed time format as 12-hour or 24-hour by tapping the **24h** or **AM/PM** button.

### Units

The Units screen lets you select **Metric** or **Imperial** according with your preferences.

### Keyboard

The device provides Russian, Bulgarian, and Greek keyboard for local users. From the Keyboard screen, tap on the keyboard you want to use.

### Language

You can select the preferred language displayed for the menus and other interface features while operating the device. From the Language screen, tap on the language you want to use.

### Product Info

The Product Info screen provides the general information of the device, including software and ROM versions, the End User License Agreement, and copyright information.

- You can reset the device to the factory default settings by tapping **Back to factory**. When you select the function, all of the recorded data on the device will be cleared.
- You can also just restore factory default settings by tapping **Restore Default**, allowing you to restore default settings but will not delete the recorded data.

# For more information

## Online support

For 24/7 help and support with Mio products, visit our Technical Support website at: <https://support.mio.com/contacts>

## Caring for your Mio

Taking good care of your Mio will ensure trouble-free operation and reduce the risk of damage to your Mio:

- Keep your Mio away from excessive moisture and extreme temperatures.
- Avoid exposing your Mio to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your Mio or drop objects on your Mio.
- Do not drop your Mio or subject it to severe shock.
- Do not subject your Mio to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your Mio. In the event of moisture condensation, allow your Mio to dry out completely before use.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your Mio when it is turned on. Use a soft, lint-free cloth to wipe the screen and the exterior of your Mio.
- Do not use paper towels to clean the screen.

- Never attempt to disassemble, repair or make any modifications to your Mio. Disassembly, modification or any attempt at repair could cause damage to your Mio and even bodily injury or property damage and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your Mio, its parts or accessories.
- Do not expose your Mio to extreme heat or direct sunlight for prolonged periods. Overheating may damage your Mio.

## Resetting the device


Occasionally, you may need to perform a hardware reset when your Mio stops responding; or appears to be “frozen” or “locked-up.” Insert a small rod, such as a straightened paperclip, into the reset button of your device.



## Troubleshooting

| Problem   | Solution  |
|---|---|
| Your Mio does not turn on when using battery power. | The remaining battery power may be too low to run your Mio. Charge the battery.                               |
| Screen responds slowly.                             | Make sure that your Mio is not running out of battery power. If the problem still persists, restart your Mio. |
| Screen freezes.                                     | Restart your Mio.   |

| Problem  | Solution   |
|--|--|
| Screen is hard to read.                        | Make sure that the backlight of the display is set to a high-enough brightness.  |
| Cannot establish a connection with a computer. | <p>Make sure that your Mio and your computer are both turned on before trying to establish a connection.</p> <p>Make sure that the cable is securely plugged into the USB port on your computer and on your Mio. Connect the USB cable directly to your computer — do not run the cable through a USB hub.</p> <p>Restart your Mio before connecting the cable.</p> <p>Always disconnect your device before you restart your computer.</p> |

 If you encounter a problem you cannot solve, contact an authorised service centre for assistance.

## What is GPS?

The Global Positioning System (GPS) is available at any time, free of charge, and is accurate to within 5m (15ft). GPS navigation is made possible by a network of satellites that orbit the Earth at around 20,200km (12,552mi). Each satellite transmits a range of signals which are utilised by GPS receivers, such as your Mio, to determine an exact location. Although a GPS receiver can detect signals from up to 12 satellites at any time, only four signals are required to provide a position or “GPS fix” (latitude and longitude), for vehicle navigation systems.

Your Mio receives GPS signals via the internal GPS antenna. To guarantee the optimum GPS signal strength, ensure your Mio is outdoors or in a vehicle outdoors, and has an unobstructed view of the sky. GPS reception is not usually affected by weather, however, very heavy rain or snow may have a negative effect on your reception.

- It is your sole responsibility to place, secure and use your Mio in a manner that will not cause accidents, personal injury or property damage. Always observe safe driving practices.
- On main roads, the distance to an exit calculated by your Mio may be further than the distance shown on road signs. Road signs show the distance to the start of an exit while your Mio shows the distance to the next intersection, i.e., the end of the exit ramp or road. To prepare to exit a road, always follow distance information on road signs.
- Mio products are designed to be used as an aid to safer driving. Mio does not condone speeding or any other failure to comply with your local traffic laws. It is your responsibility to drive within the posted speed limit at all times and to drive in a careful manner. Mio accepts NO liability whatsoever for you receiving any speeding fines or points on your license through using this device. Mio does not guarantee the accuracy of the data contained within this database either expressed or implied. In the event you receive a fine or any other penalty for speeding or contravention of any traffic law, or are involved in an accident, Mio is not responsible for any damages of any type. In some countries the data information regarding speed limits may conflict with local law and/or regulations. It is your responsibility to make sure that your use of the data is in compliance with local laws and/or regulations. Usage is at your own risk.
- Do not operate the device while driving or riding a bike. Using this product does not change the requirement for a driver or a bike rider to take full responsibility for his or her behaviour. This responsibility includes observing all traffic rules and regulations in order to avoid accidents, personal injury or property damage.

## IPX5

The IPX5 is a European system of test specification standards for classifying the degrees of protection provided by the enclosures of electrical equipment. An IPX5 designation means that the unit is protected against water jets but NOT against immersion in water or water-pressure such as washing the unit with running water. Because of possible user-resealing error, this product is not warranted against waterproof housing leakage or any resulting damage. Please make sure the waterproof cover is tightly closed before using the product.

## Safety precautions

### About charging

- This product is intended to be supplied by a LISTED Power Unit marked with "LPS", "Limited Power Source" and output rated + 5 V dc / 1.0 A.
- Use a specified battery in the equipment.

### About the battery

- Use a specified battery in the equipment.  
**CAUTION:** This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture or dispose of in fire or water.
- Important instructions (for service personnel only)
  - **Caution:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
  - Replace only with the same or equivalent type recommended by the manufacturer.

- The battery must be recycled or disposed of properly.
- Use the battery only in the specified equipment.

## Regulatory information

For regulatory identification purposes, Mio Cyclo Discover is assigned a model number of N506.



Marking labels located on the exterior of your device indicate the regulations that your model complies with. Please check the marking labels on your device and refer to the corresponding statements in this section. Some notices apply to specific models only.

Products with the CE marking comply with the Radio Equipment Directive (RED) (2014/53/EU), the Electromagnetic Compatibility Directive (2014/30/EU) and the Low Voltage Directive (2014/35/EU) - issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Standards:

- EN 303 413
- EN 301 489-1
- EN 301 489-3
- EN 55022
- EN 55024
- EN 61000-3-2
- EN 61000-3-3
- EN 300 440-1
- EN 300 440-2
- EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013



The manufacturer cannot be held responsible for modifications made by the User and the consequences thereof, which may alter the conformity of the product with the CE Marking.

### **Declaration of Conformity**

Hereby, MiTAC declares that this N506 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

### **WEEE**



This product must not be disposed of as normal household waste, in accordance with the EU directive for waste electrical and electronic equipment (2012/19/EU). Instead, it should be disposed of by returning it to the point of sale or to a municipal recycling collection point.

### **End user license agreement**

You should read the following terms and conditions of this Agreement ("Agreement") carefully before using this Mio Cyclo device, its accessories and any other accompanying items ("Product") that includes licensed products, including but not limited to software, digital map data or other data and services ("Software") licensed by MiTAC Europe Limited, company number 4214164, registered address in Spectrum House, Beehive Ring Road, London Gatwick Airport, RH6 0LG, United Kingdom and MiTAC Benelux NV, company number 0450804332, registered address in Zone 5 Mollem 318, 1730 Mollem, Asse, Belgium, URL: [eu.mitac.com](http://eu.mitac.com) ("Mio") to be used only, as set forth below. For any further information on Product or support, consult URL: [www.mio.com/support](http://www.mio.com/support)

IF YOU DO NOT AGREE TO THE TERMS OF THIS END USER LICENSE AGREEMENT, PLEASE DO NOT USE THIS PRODUCT AND DO NOT COPY ANY SOFTWARE INSTALLED THEREIN. IN SUCH CASE, PROMPTLY CONTACT MIO OR ANY AUTHORIZED DEALER FOR INSTRUCTIONS TO RETURN THE UNUSED PRODUCT WITH ALL ACCOMPANYING ITEMS. SHOULD YOU HAVE PAID FOR THE PRODUCT OR THE SOFTWARE, MIO OR ANY AUTHORIZED DEALER MAY REFUND THE PURCHASE PRICE PROVIDED THAT YOU PROVIDE A VALID AND ACCEPTED PROOF OF PURCHASE AND PROOF OF PAYMENT.

ANY USE OF THE PRODUCT OR SOFTWARE WILL CONSTITUTE YOUR ACCEPTANCE OF THIS AGREEMENT.

**GRANT OF LICENSE:** This Agreement grants you a non-exclusive and revocable license to use the Software installed on the hardware device or any other storage medias (on only one hardware device at a time), for your internal business purposes or personal use.

This Agreement does not imply or grant you any rights to future updates or upgrades of the Software unless expressly instructed by Mio in writing. Any updates or upgrades are governed by this Agreement and may be subject to additional payments and other conditions.

You may copy Software or any supporting and accompanying documentation ("Documentation") for backup or archive purposes only and for the support of use of the Software as permitted hereunder. All such copies must reproduce and include all copyright notices and any other proprietary rights notice appearing on the Software and Documentation.

The Documentation may contain mulNotele versions of this Agreement, including but not limited to mulNotele translations and mulNotele media versions. Even if you receive mulNotele

versions of this Agreement, you are licensed to use only one copy of the Software.

THE SOFTWARE LICENSED HEREUNDER MAY CONTAIN DEFECTS. YOU ARE ADVISED NOT TO RELY ON THIS SOFTWARE, TO SAFEGUARD IMPORTANT DATA, TO USE CAUTION AND NOT TO RELY IN ANY WAY ON THE CORRECT FUNCTIONING OR PERFORMANCE OF THE SOFTWARE AND ACCOMPANYING MATERIALS.

The software is not designed or licensed for use in mission-critical applications, or in hazardous environments, requiring fail-safe controls, including without limitation operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, or life support or weapons systems.

To the maximum extent permitted by applicable law, the Software is provided to you "AS IS AND WITH ALL FAULTS", and Mio, its suppliers and licensors hereby disclaim any warranty, express or implied (either in fact or by operation of law), with respect to the Software, either as to merchantability, fitness for particular purpose, or any other matter. You acknowledge and agree that the Software has not been tested or certified by any government agency or industry regulatory organization or any other third party organization. In no event shall Mio, its suppliers and licensors be held liable for, liabilities or obligations for damages, including but not limited to special, indirect, or consequential damages or loss of use, revenue, or profits in connection with or arising out of this Agreement or any breach of this Agreement by Mio, its suppliers or licensors or the existence, furnishing, functioning, or any use of the Software. Any other representations or warranties made by any person, including employees or representatives of Mio, its suppliers and licensors, which are inconsistent herewith shall be disregarded by you and shall not be binding upon Mio, its suppliers and licensors, if any product model or sample was shown to you, such model or sample was used merely

to illustrate the general type and quality of the product and not to represent that the Software would necessarily conform with such model or sample. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY MIO, ITS SUPPLIERS AND LICENSORS OR ON THEIR BEHALF SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS LIMITED WARRANTY, AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION.

Any liability of Mio, its suppliers and licensors towards you shall be void if any damage to the Product is caused by accident, transportation, neglect or misuse, alteration (which shall include, but not be limited to, any deviation from the specifications), any unauthorized modification or enhancement of the Product, failure to maintain a suitable operating environment, or the use of the Product for other than the specific purpose for which it was designed.

In no event shall Mio, its suppliers and licensors be liable for any third party materials, database and/or their content including the GUI and all other implications arising from such error or malfunction related to database.

Provision of the Product under this Agreement shall not create any obligation for Mio, its suppliers and licensors to continue to develop, productize, support, repair, offer for sale or in any other way continue to provide or develop software either to you or to any other party.

**RESTRICTIONS:** You are not permitted to: analyze, modify, translate, adapt, reverse engineer, decompile, disassemble, or otherwise reduce the Software to a perceivable form; create derivative works based on the Software or any part thereof, or attempt to increase the functionality of the Software in any manner; copy or download the Software (except for backup purposes as stated above), reproduce through any electronic or mechanical means, and distribute copies – any unauthorized

copying is expressly prohibited; rent, lend, resell, distribute, sublicense or otherwise transfer rights to the Software, in any other way than assigning the Product in meeting with below conditions; remove or obscure any copyright or proprietary notices or labels in the Software; perform, broadcast, display or present the Software in public.

The Software is the confidential information of Mio, its suppliers and licensors. You are not allowed to disclose the Software to third parties. The removal or obscuring of any copyright, trademark notice or restrictive legend of Mio, its suppliers and licensors is not allowed.

**ASSIGNMENT:** Provided the transferee agrees to the terms of this Agreement, transfer of the Product may be allowed. Such transfer must include all copies of the Software and Documentation without restriction. It also includes all prior versions, updates and upgrades of the Software.

**EXPORT RESTRICTIONS:** You accept to comply with all applicable international or national laws (of the European Union, the United States of America or other) that apply to the Product, including the Software and the Documentation, and shall not export or re-export the Product, the Software and the Documentation (or any copies thereof) or any product utilizing the Product, the Software or the Documentation in violation of any applicable laws or regulations to any person or entity in any country subject to such restrictions, including but not limited to Cuba, Iran, Libya, North Korea, Sudan and Syria, or to any person or entity, wherever located, who intends to export or re-export to such country. For further information in relation to this restriction, please seek advice from the relevant governmental agencies.

**INTELLECTUAL PROPERTY RIGHTS:** Mio or its suppliers or licensors, own all intellectual property rights in and to the Product, the Software and the Documentation, and any copies

thereof. Except as expressly provided herein, this Agreement does not grant you any rights to patent, copyrights, trade secret, trademarks, or any other intellectual property rights.

**TERMINATION:** This Agreement is effective as of the date of its acceptance until expired or terminated according to the terms of this Agreement. You may terminate this Agreement at any time by destroying the Product, the Software and the Documentation together with all copies and merged portions in any form. This Agreement may be terminated immediately by Mio for any reason, including but not limited to any failure to comply with any term or condition of this Agreement. In such event, you must destroy the Product, the Software and the Documentation together with all copies and merged portions in any form. In addition, this Agreement shall terminate immediately upon the termination of the agreement between Mio and any third-party from whom Mio licenses Software. All rights granted to you by this Agreement shall cease upon termination including, but not limited to, all licenses granted hereunder.

**GOVERNING LAW:** This Agreement shall be governed by the laws of England.

**LIMITED WARRANTY; LIMITED LIABILITY:** All warranties and limitations of liability applicable to the Product, the Software and the Documentation are as stated on the limited warranty provisions as provided by the limited warranty statement to this Product or in the manual regarding the Product or Software ("Limited Warranty"). Such warranties and limitations of liability are entirely incorporated herein by this reference.

**EXCEPT AS PROHIBITED BY LAW, MIO AND ITS SUPPLIERS OR LICENSORS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, PUNITIVE OR INCIDENTAL DAMAGES OF ANY KIND, OR LOSS OF INFORMATION OR DATA, ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF**

THE PRODUCT, SOFTWARE AND DOCUMENTATION. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

SEVERABILITY: In the event any provision of this Agreement is found to be invalid, illegal or unenforceable, the remaining provisions shall be still valid, legal and enforceable without being affected or impaired in any way and a valid, legal and enforceable provision of similar intent and economic impact shall be substituted therefore.

ENTIRE AGREEMENT: This Agreement sets forth the entire understanding and agreement between you and Mio with respect to the Product, the Software and the Documentation, and supersedes all prior agreements and communications, whether orally or written thereof.